

MINI CREDIT BOARD

EDGE CONNECTOR

- 1 Power, 5 volts or 12 volts DC
- 2 GND
- 3 GND
- 4 (RELAY N.O.)
- 5 (RELAY N.C.)
- 6 (RELAY COM)
- 7 -
- 8 -
- 9 OUTPUT to game board coin input
- 10 -
- 11 Service Switch
- 12 Coin Switch 2 (\$1)
- 13 Coin Meter 2
- 14 Coin Switch 1 (20c)
- 15 Coin Meter 1
- 16 -
- 17 (Lockout Sense +)
- 18 (Lockout Sense -)

(Functions in brackets only for special Skill Tester version.)

DIP SWITCH SETTINGS

Coins		Credit	1	2	3	4	5	6
<u>COIN 1</u>	1	1	ON	OFF	OFF			
	2	1	OFF	ON	OFF			
	3	1	ON	ON	OFF			
	4	1	OFF	OFF	ON			
	5	1	ON	OFF	ON			
	6	1	OFF	ON	ON			
	7	1	ON	ON	ON			
	invalid combination!			off	off	off		
<u>COIN 2</u>	1	1				OFF	OFF	ON
	1	2				OFF	ON	OFF
	1	3				OFF	ON	ON
	1	4				ON	OFF	OFF
	1	5				ON	OFF	ON
	1	6				ON	ON	OFF
	1	7				ON	ON	ON
	invalid combination!						off	off

INSTALLATION NOTES

- Set video game board Dip Switches for one game per coin.
- Locate credit board so it will not be subject to beer or coke spills.
- Adjust coin switch wire (by bending) such that minimum downward movement is required to activate the coin switch. This will ensure reliable operation of the coin meters, which are driven directly from the coin switches.